

MS1000 QUICK START

1 INSTALL THE SOFTWARE

- Insert the USB flash drive into your computer.
- Run the Setup file.
- Apply the default settings during installation.


2 INSTALL YOUR SONAR

- Connect the system units as shown.
- Apply power to the Interface Unit and computer.

3 START THE SOFTWARE

- Plug the software key (dongle) into a USB port on your PC.
- Double-click the MS1000 icon to start the software.


Make sure all USB connections are made before starting the software.

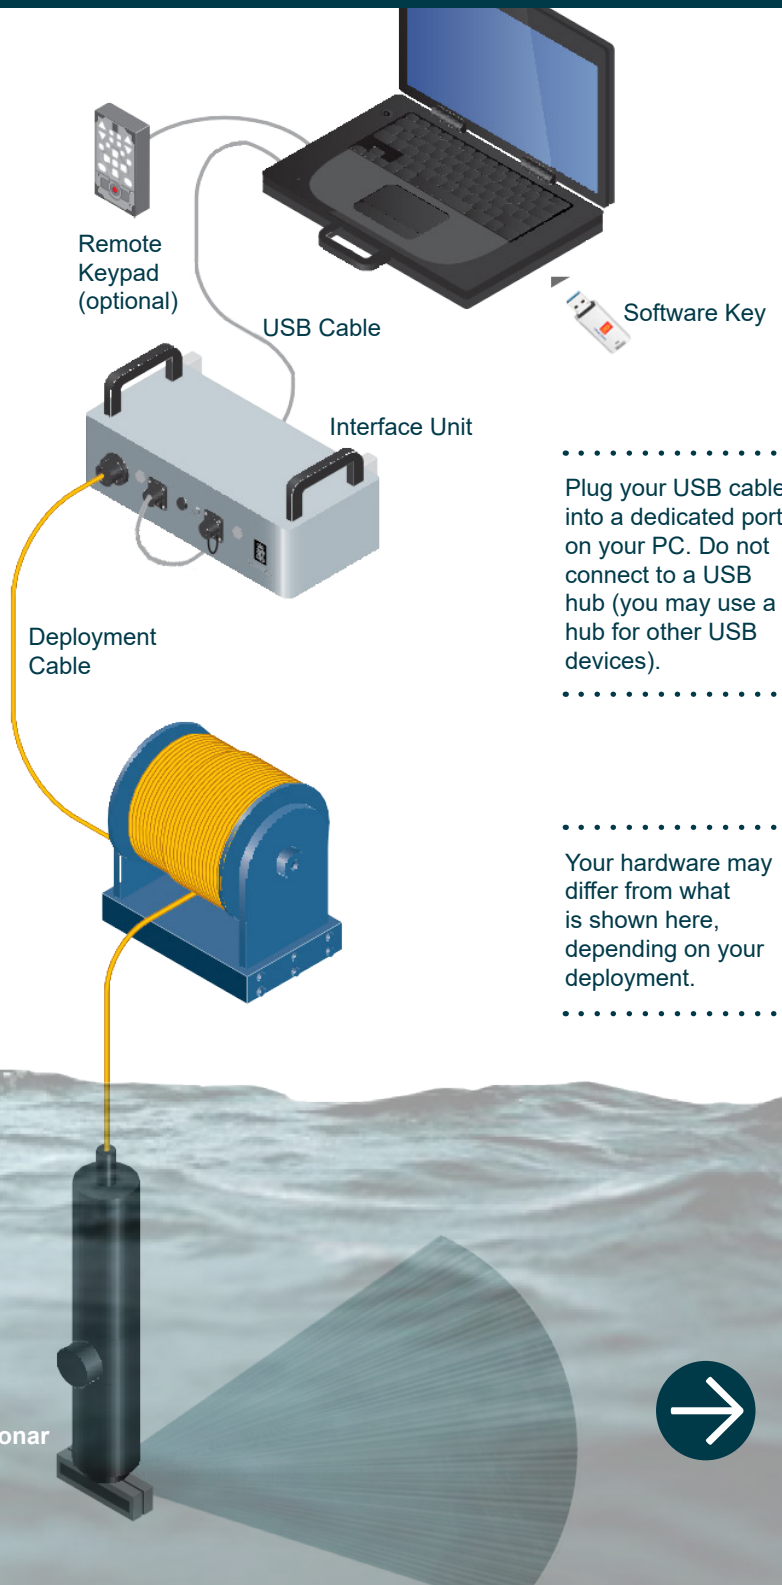


MS1000 QUICK START

4 SET UP YOUR SONAR

- Click the **Setup** tab.
- Click the **Connect Sonar** button.

 **Connect Sonar**

- In the **Devices** list, select the COM, USB, or Ethernet port your sonar is connected to.
- Make sure the **Enable for Head Control** box is checked.
- If you are using more than one sonar on one telemetry cable, check the **Multidrop** box.
- Click the **Detect Heads** button.
- Click **Apply**.
- Click **OK**.

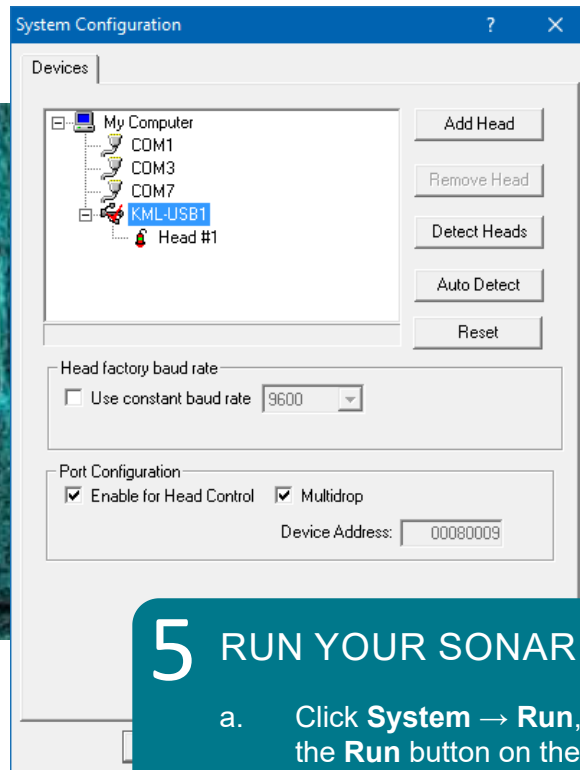

6 POWER OFF THE SONAR

- Click **System** → **Stop** to stop scanning.

 **System: Stop** 

- Click **System** → **OFF**.
- Click **Save** to save your settings and close the MS1000 software.
- Turn off the computer.
- Disconnect the power to the Interface Unit, or switch off the breaker supplying power to your sonar.

5 RUN YOUR SONAR

- Click **System** → **Run**, or click the **Run** button on the tool bar.



Observe that a **Startup** dialog box appears and that the Sonar Head turns during calibration.

- Verify that the scan marker rotates and that the sonar view updates.

